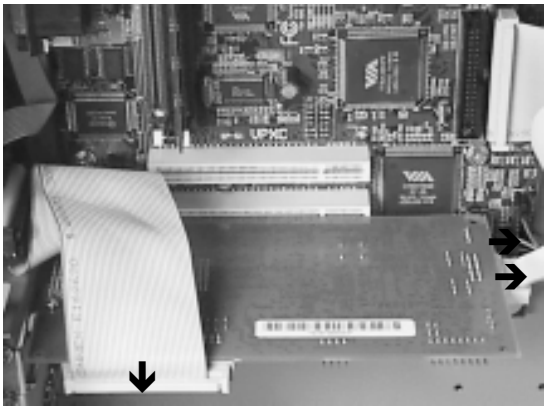

3. OIF PCB

A) Remove the external covers (see 1 above) and remove the PSU as above.

B) Lay the unit on its side.

C) Remove the parallel ribbon cable,the front panel ribbon cable and the speaker connection cable to the mother board.

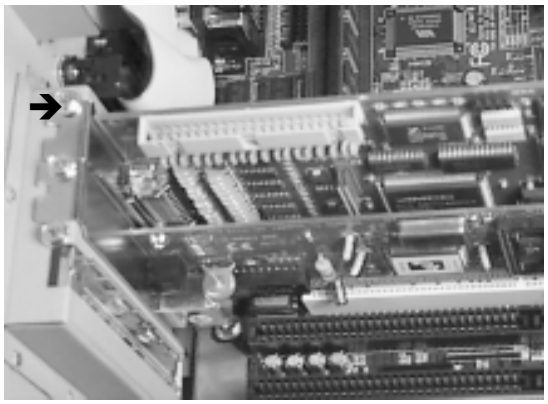

D) Remove the one cover plate screw on the left of the PCB.

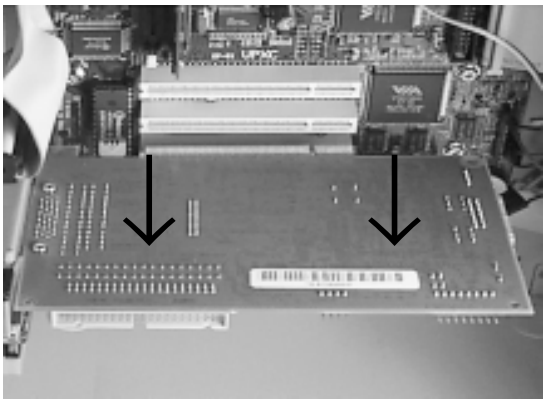

E) Slide the PCB gently out in the direction indicated, being careful to apply equal pressure to both sides of the PCB card and remove the card through the top of the SC7700.

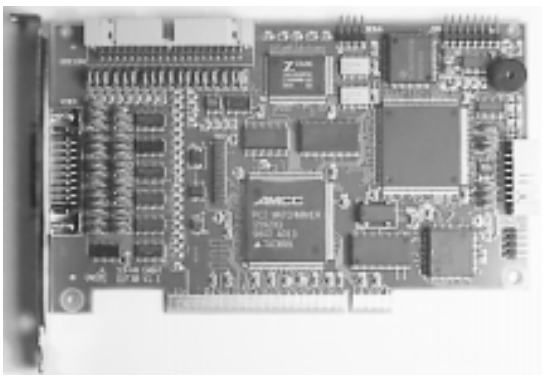

Important Note

The OIF PCB and internal hard disk drive are supplied as one spare part and will only work as a pair. (See troubleshooting section 6.)

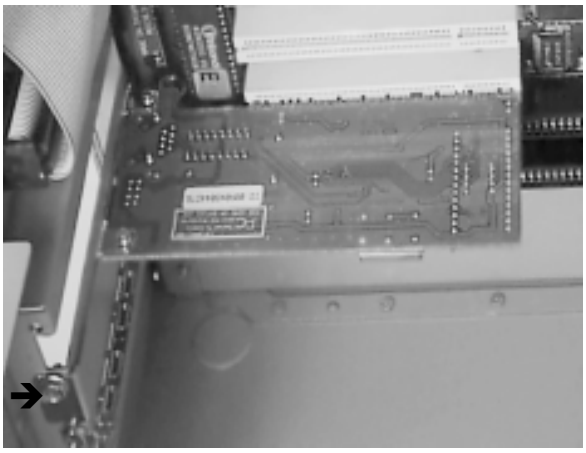

4. Ethernet PCB

A) Remove the external covers (see 1 above) and remove the PSU as above.

B) Lay unit on its side.

C) Remove the one cover plate screw on the left of the PCB.

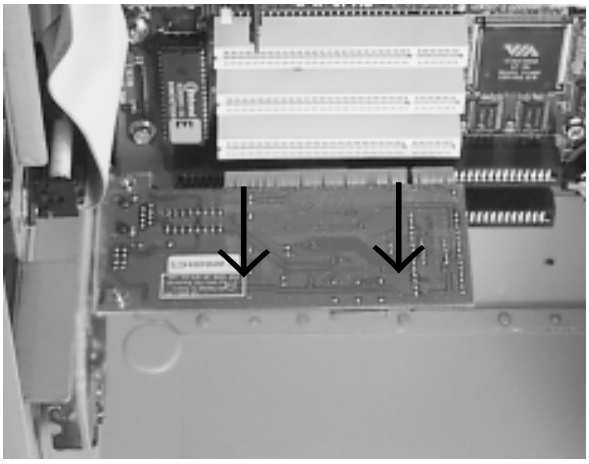
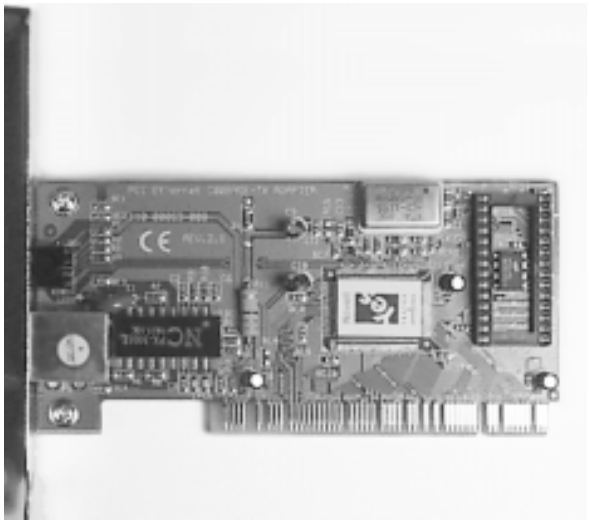
D) Slide the PCB gently out in the direction indicated, being careful to apply equal pressure to both sides of the PCB card and remove the card through the top of the SC7700.